


HOW TO UNROLL

Chicken Wire

What You'll Need:

- Chicken wire mesh
- Protective gloves
- Wire cutters
- Stone or brick
- Tape measure
- Marker


1 Lay It Flat

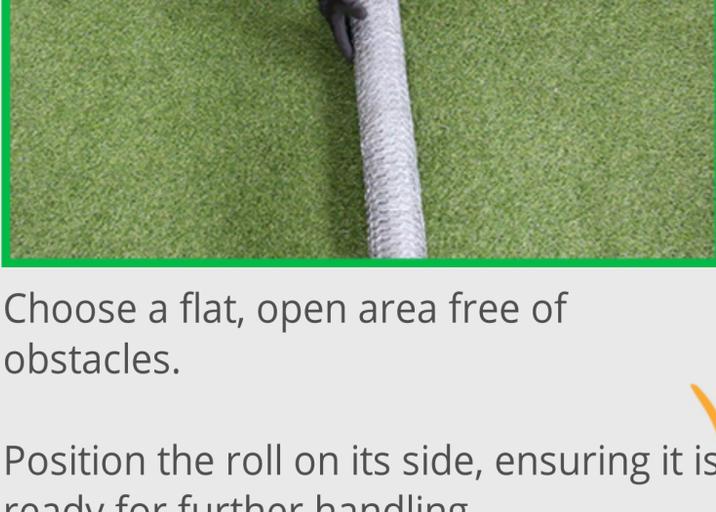

Choose a flat, open area free of obstacles.

Position the roll on its side, ensuring it is ready for further handling.


2 Cut the Thin Wire to Open

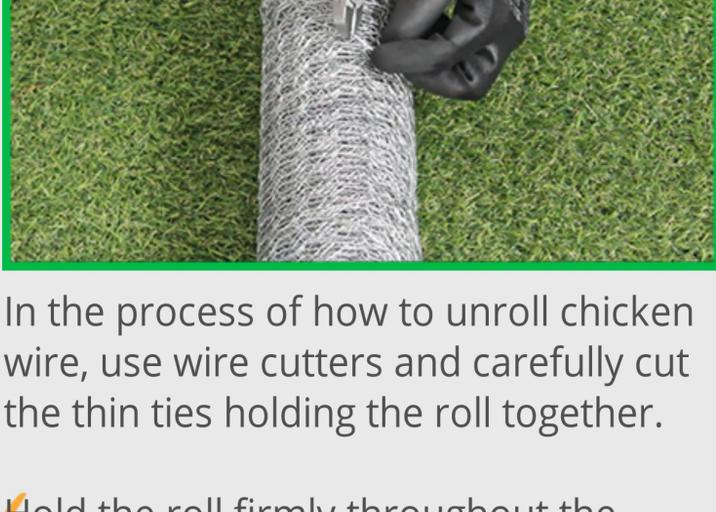

In the process of how to unroll chicken wire, use wire cutters and carefully cut the thin ties holding the roll together.

Hold the roll firmly throughout the process to prevent it from springing open.

3 Unroll Chicken Wire

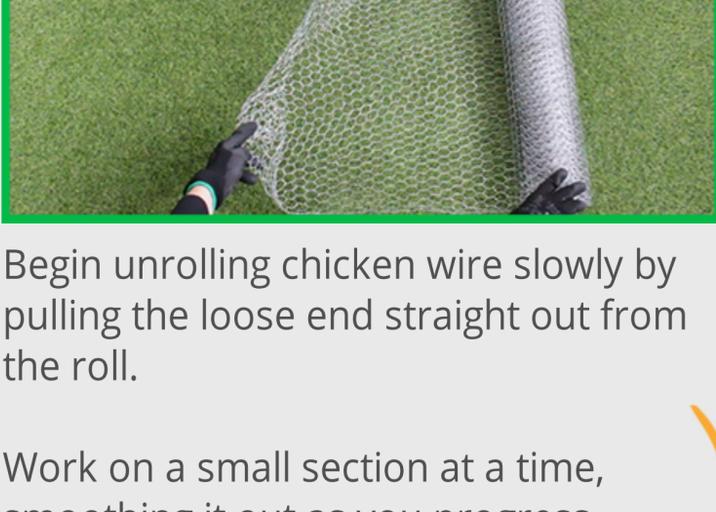

Begin unrolling chicken wire slowly by pulling the loose end straight out from the roll.


Work on a small section at a time, smoothing it out as you progress.

4 Unfold Edges



Gently straighten the curled edges of the chicken netting by unfolding them with your hands or pliers.


5 Flatten the Mesh

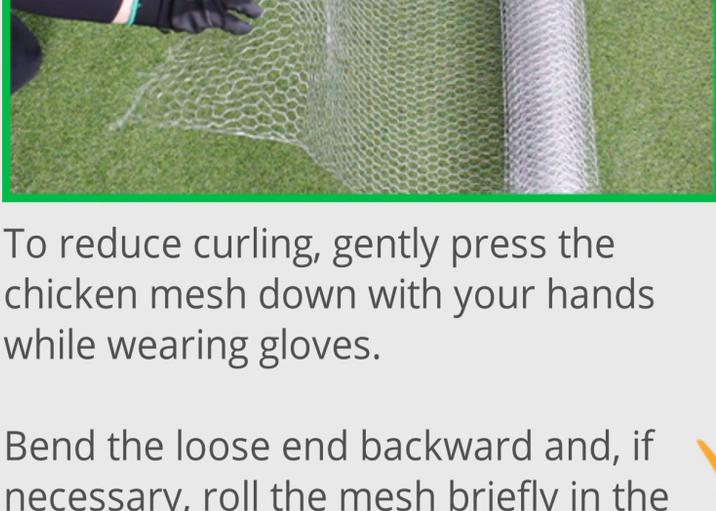

To reduce curling, gently press the chicken mesh down with your hands while wearing gloves.


Bend the loose end backward and, if necessary, roll the mesh briefly in the opposite direction to help it lay flatter.

6 Weight It Down

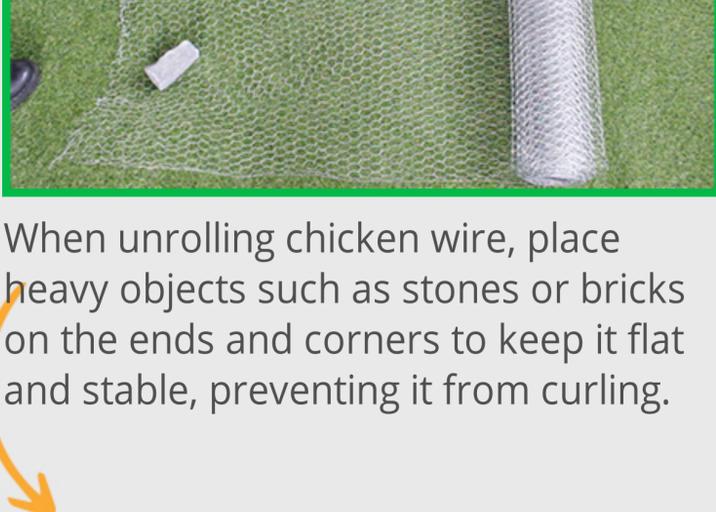

When unrolling chicken wire, place heavy objects such as stones or bricks on the ends and corners to keep it flat and stable, preventing it from curling.

7 Measure & Mark (optional)

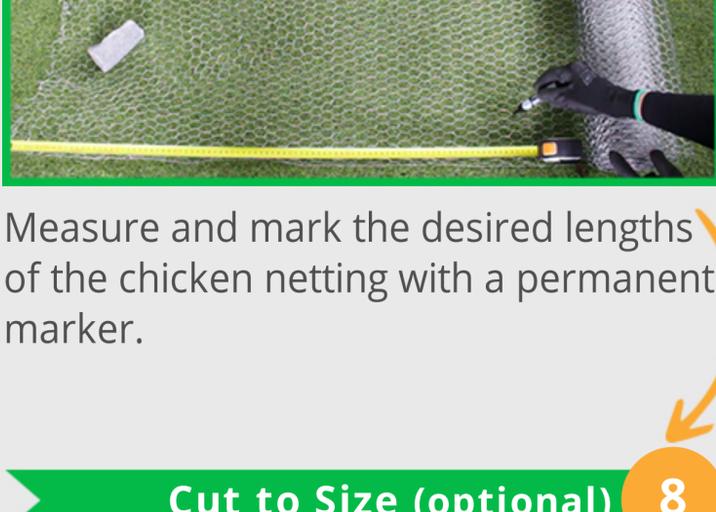

Measure and mark the desired lengths of the chicken netting with a permanent marker.

8 Cut to Size (optional)



Use wire cutters to trim the mesh along the markings to the appropriate size.