

# HOW TO PAINT WIRE MESH

## Step by Step

### What You'll Need:

- Protective Gloves
- Spray Paint
- Wire Cutters
- Wire Mesh
- Cardboard/  
Old Newspaper

## 1 Gather Supplies



Lay out a discardable piece of cardboard to simplify cleanup. Collect all required tools and materials. Pick your desired mesh colour and select compatible spray paint.

## Cut the Mesh 2



Use wire cutters to cut the mesh to your desired dimensions.

Wear protective gloves to avoid cuts from sharp edges.

## 3 Paint the Mesh



Follow instructions on the spray paint can.


Apply an even coat of paint over the wire mesh.

## Paint the Reverse Side 4



Flip the mesh and apply another even layer of spray paint.

## 5 Allow to Dry

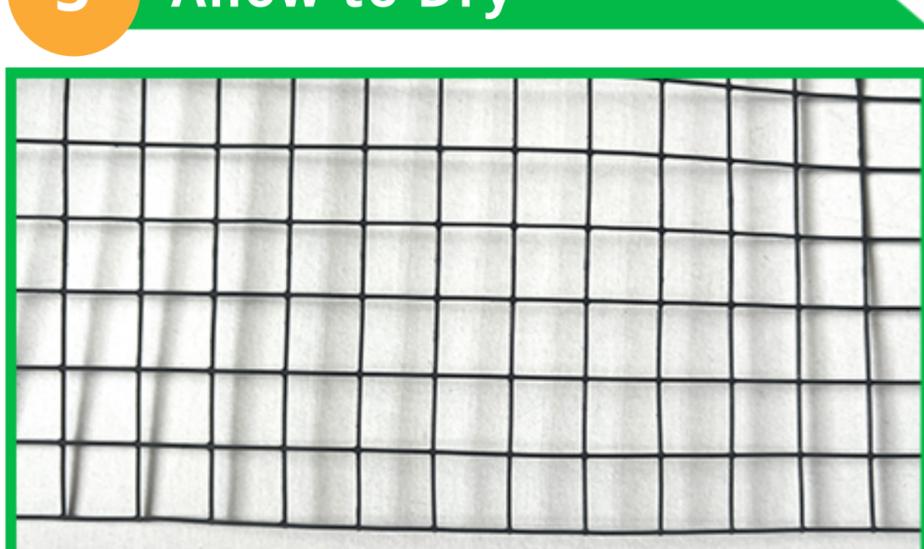

Let the painted wire mesh dry completely.

Congratulations, you're finished!