


HOW TO ATTACH a Fence Panel to a Post

METAL T POST

What You'll Need:

- Protective gloves
- Wire mesh panels
- T posts
- Cable ties
- Wire cutters

1 Secure it to the Post

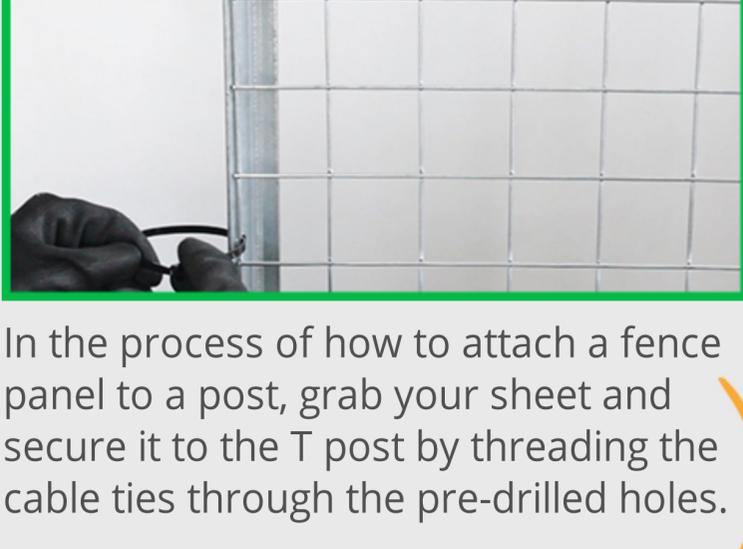

In the process of how to attach a fence panel to a post, grab your sheet and secure it to the T post by threading the cable ties through the pre-drilled holes.

2 Cut off Excess




Then, cut off the excess length of the secured cable ties.

WOOD POST

What You'll Need:

- Protective gloves
- Wire mesh panels
- Wooden posts
- Staples
- Hammer
- Pliers


1 Secure the Top

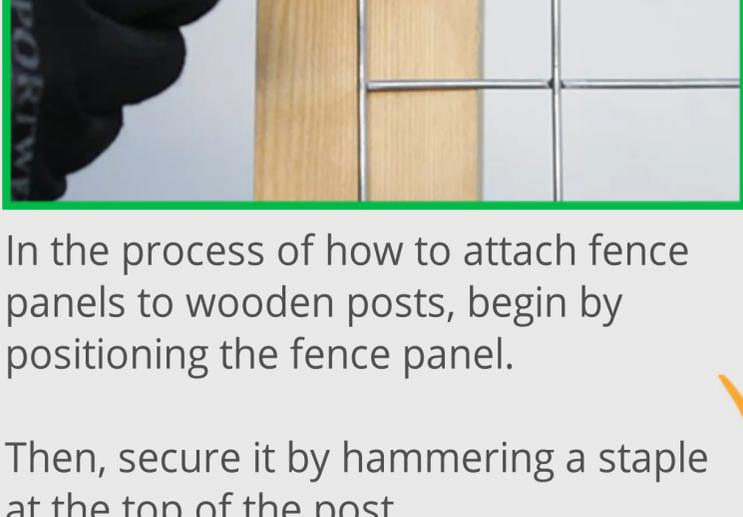

In the process of how to attach fence panels to wooden posts, begin by positioning the fence panel.

Then, secure it by hammering a staple at the top of the post.

2 Continue Attaching

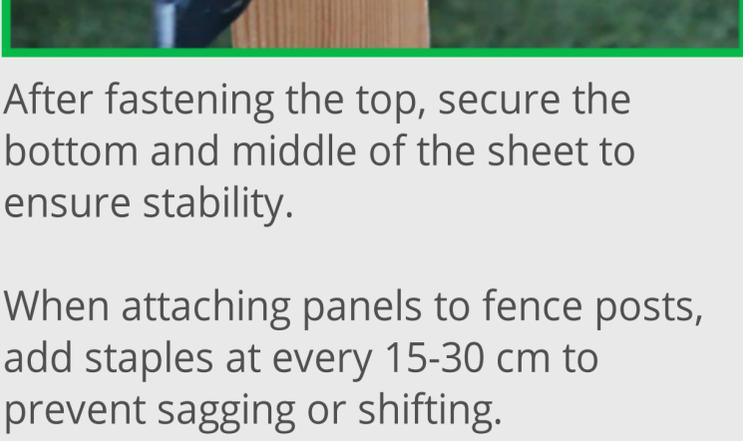

After fastening the top, secure the bottom and middle of the sheet to ensure stability.


When attaching panels to fence posts, add staples at every 15-30 cm to prevent sagging or shifting.

EXISTING PANEL

What You'll Need:

- Protective gloves
- Wire mesh panels
- Cable ties
- Wire cutters


1 Overlap & Connect

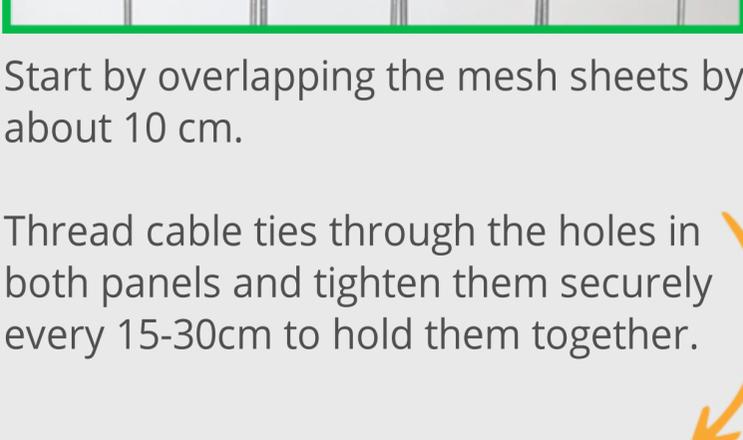

Start by overlapping the mesh sheets by about 10 cm.

Thread cable ties through the holes in both panels and tighten them securely every 15-30cm to hold them together.

2 Trim Excess

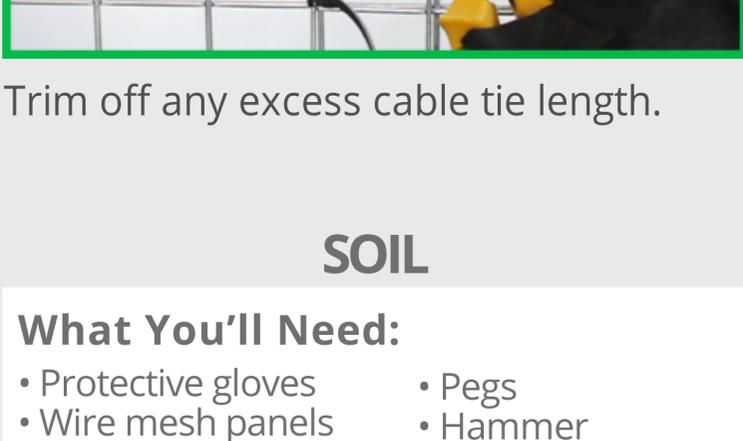

Trim off any excess cable tie length.

SOIL

What You'll Need:

- Protective gloves
- Wire mesh panels
- Pegs
- Hammer

Secure it to the Ground



Take some pegs and push them into the ground, making sure the hook catches the bottom of the panel.

You can use a hammer to space them around 60cm apart.